



Initial setup of Ethernet switches

MES23xx and MES24xx



Ethernet switches models by lines



MES23XX/33XX/5324

MES2308C/P/CP
MES2324/B/P/F/FB
MES2348/B/P
MES3308F
MES3316F
MES3324/F
MES3348/F
MES2328I
MES3508/P
MES3510P
MES5324

MES14XX/24XX

MES2408/B/C/P/PL
MES2424/B/P/FB
MES2428/B/P/
MES2448/B/P
MES3710P
MES2410-08DP
MES2420-48P
MES3400I-24
MES3400-24/F
MES3400-48

Basic setup



MES23XX/33XX/5324

```
console#configure  
console(config)# hostname MES2324  
MES2324# clock set 12:00:00 jul 31 2024
```

MES14XX/24XX

```
console#configure  
console(config)# hostname MES2424  
MES2424# clock set 12:00:00 31 july 2024
```

Users and privileges



MES23XX/33XX/5324

```
MES2324(config)# username alice privilege 1 password  
password
```

```
MES2324(config)# enable password level 15 godemode
```

```
MES2324(config)# privilege exec 1 show running-config
```

```
MES2324(config)# privilege exec 1 configure
```

MES14XX/24XX

```
MES2424(config)# username alice password password  
privilege 1
```

```
MES2424(config)# enable password level 15 godemode
```

Creating and assigning VLAN to an interface



MES23XX/33XX/5324

```
MES2324(config)# vlan database  
MES2324(config-vlan)# vlan 10 name test  
MES2324(config)# interface GigabitEthernet 1/0/1  
MES2324(config-if)# switchport access vlan 10
```

MES14XX/24XX

```
MES2424(config)# vlan 10  
MES2424(config-vlan)# vlan active  
MES2424(config-vlan)# name test  
MES2424(config)# interface gigabitethernet 0/1  
MES2424(config-if)# switchport mode access  
MES2424(config-if)# switchport access vlan 10
```

Assigning a VLAN in trunk mode to an interface



MES23XX/33XX/5324

```
MES2324(config)# interface GigabitEthernet 1/0/1
```

```
MES2324(config-if)# switchport mode trunk
```

```
MES2324(config-if)# switchport trunk allowed vlan add 10
```

```
MES2324(config-if)# switchport trunk allowed vlan  
remove 10
```

```
MES2324(config-if)# switchport trunk allowed vlan all
```

MES14XX/24XX

```
MES2424(config)# interface GigabitEthernet 0/1
```

```
MES2424(config-if)# switchport mode trunk
```

```
MES2424(config-if)# switchport mode general
```

```
MES2424(config-if)# switchport general allowed vlan  
add 10
```

```
MES2424(config-if)# switchport general allowed vlan  
remove 10
```

Voice VLAN



MES23XX/33XX/5324

```
MES2324(config)# voice vlan oui-table add a8f94b  
MES2324(config)# voice vlan id 10  
MES2324(config)# voice vlan state oui-enabled  
  
MES2324(config)# lldp med network-policy 1 voice vlan 10  
vlan-type tagged up 4  
  
MES2324(config)# interface gigabitethernet 1/0/1  
MES2324(config-if)# switchport mode general  
MES2324(config-if)# voice vlan enable  
MES2324(config-if)# lldp med enable network-policy  
MES2324(config-if)# lldp med network-policy add 1  
MES2324(config-if)# switchport general allowed vlan add  
20 untagged  
MES2324(config-if)# switchport general pvid 20
```

MES14XX/24XX

```
MES2424(config)# voice vlan oui-table add e4:5a:d4  
MES2424(config)# voice vlan id 10  
MES2424(config)# set lldp enable  
MES2424(config)# lldp transmit-interval 5  
  
MES2424(config)# interface gigabitethernet 0/1  
MES2424(config-if)# switchport mode general  
MES2424(config-if)# switchport voice vlan  
MES2424(config-if)# switchport general allowed vlan add  
20 untagged  
MES2424(config-if)# switchport general pvid 20  
MES2424(config-if)# set lldp-med enable  
MES2424(config-if)# lldp med-tlv-select med-capability  
MES2424(config-if)# lldp med-tlv-select network-policy  
MES2424(config-if)# lldp med-app-type voice vlan vlan-id 10 Priority 4 dscp 0
```



MES23XX/33XX/5324

```
MES2324(config)# no spanning-tree  
MES2324(config)# spanning-tree mode rstp  
MES2324(config)# spanning-tree priority {0 — 61440}  
MES2324(config)# interface GigabitEthernet1/0/1  
MES2324(config-if)# spanning-tree disable  
MES2324(config-if)# spanning-tree bpdu filtering  
MES2324(config)# interface GigabitEthernet1/0/2  
MES2324(config-if)# spaning-tree portfast  
MES2324(config-if)# spanning-tree bpduguard enable
```

MES14XX/24XX

```
MES2424(config)# no spanning-tree  
MES2424(config)# spanning-tree mode rst  
MES2424(config)# spanning-tree priority {0 — 61440}  
MES2424(config)# interface GigabitEthernet 0/1  
MES2424(config-if)#spanning-tree disable  
MES2424(config-if)# spanning-tree bpdufilter enable  
MES2424(config)# interface GigabitEthernet 0/2  
MES2424(config-if)# spaning-tree portfast  
MES2424(config-if)# spanning-tree bpduguard enable
```

IP-address configuration



MES23XX/33XX/5324

```
MES2324(config)# interface vlan 1
```

```
MES2324(config-if)# ip address 172.20.137.50  
255.255.255.0
```

```
MES2324(config-if)# ip address 172.20.137.50 /24
```

MES14XX/24XX

```
MES2424(config)# interface vlan 1
```

```
MES2424(config-if)# ip address 172.20.137.50  
255.255.255.0
```

```
MES2424(config-if)# ip address 172.20.137.50 /24
```





MES23XX/33XX/5324

```
MES2324(config)# interface vlan 10
MES2324(config-if)# ip address 172.16.2.2 /24
MES2324(config-if)# vrrp 10 ip 172.16.2.1
MES2324(config-if)# vrrp 10 priority 1
MES2324(config-if)# vrrp 10 preempt
MES2324(config-if)# no vrrp 10 shutdown
```

MES14XX/24XX

```
MES2424(config)# vrrp enable
MES2424(config)# interface vlan 10
MES2424(config-if)# ip address 172.16.2.2 255.255.255.0
MES2424(config-if)# vrrp 1 ipv4 172.16.2.1
MES2424(config-if)# vrrp 1 accept-mode enable
MES2424(config-if)# vrrp 1 priority 1
MES2424(config-if)# vrrp 1 preempt
```



MES23XX/33XX/5324

```
MES2324(config)# ip dhcp server
```

```
MES2324(config)# ip dhcp pool network Test
```

```
MES2324(config-dhcp)# address low 10.0.1.100 high  
10.0.1.150 255.255.255.0
```

```
MES2324(config-dhcp)# default-router 10.0.1.1
```

```
MES2324(config-dhcp)# dns-server 10.0.1.1
```

```
MES2324(config)# interface vlan 10
```

```
MES2324(config-if)# ip address 10.0.1.1 /24
```

```
MES2324(config)# interface GigabitEthernet 1/0/11
```

```
MES2324(config-if)# switchport access vlan 10
```

MES14XX/24XX

```
MES2424(config)# ip dhcp server
```

```
MES2424(config)# ip dhcp pool 1 Test
```

```
MES2424(config-dhcp)# network 10.10.10.10 10.10.10.15
```

```
MES2424(config-dhcp)# default-router 10.10.10.1
```

```
MES2424(config-dhcp)# dns-server 10.10.10.1
```

```
MES2424(config)# interface vlan 10
```

```
MES2424(config-if)# ip address 10.10.10.1 255.255.255.0
```

```
MES2424(config)# interface GigabitEthernet 0/11
```

```
MES2424(config-if)# switchport access vlan 10
```



MES23XX/33XX/5324

```
MES2324(config)# interface vlan 10
MES2324(config-if)# ip address 192.168.1.10 /24
```

```
MES2324(config)# router ospf 1
MES2324(router_ospf_process)# router-id 192.168.1.10
MES2324(router_ospf_process)# network 192.168.1.10 area 0.0.0.0
MES2324(router_ospf_process)# redistribute connected subnets
```

MES14XX/24XX

```
MES2424(config)# interface vlan 10
MES2424(config-if)# ip address 192.168.1.10 /24
```

```
MES2424(config)# router ospf
MES2424(router_ospf_process)# router-id 192.168.1.10
MES2424(router_ospf_process)# network 192.168.1.10 area 0.0.0.0
MES2424(router_ospf_process)# redistribute connected subnets
MES2424(router_ospf_process)# no shutdown
```



MES23XX/33XX/5324

```
MES2324(config)# dot1x system-auth-control
MES2324(config)# aaa authentication dot1x default
radius none
MES2324(config)# radius-server host 10.0.1.2 key eltex

MES2324(config)# interface gigabitethernet1/0/1
MES2324(config-if)# switchport mode access
MES2324(config-if)# switchport access vlan 500
MES2324(config-if)# dot1x host-mode multi-sessions
MES2324(config-if)# dot1x port-control auto
MES2324(config-if)# dot1x reauthentication
```

MES14XX/24XX

```
MES2424(config)# dot1x system-auth-control
MES2424(config)# aaa authentication dot1x default
group radius
MES2424(config)# radius-server host 10.0.1.2 key eltex

MES2424(config)# interface gigabitethernet 0/1
MES2424(config-if)# switchport mode access
MES2424(config-if)# switchport access vlan 500
MES2424(config-if)# dot1x host-mode multi-sessions
MES2424(config-if)# dot1x port-control auto
MES2424(config-if)# dot1x reauthentication
```

Storm control



MES23XX/33XX/5324

```
MES2324(config)# errdisable recovery cause storm-control
```

```
MES2324(config)# traffic-limiter mode pps
```

```
MES2324(config)# interface gigabitethernet1/0/3
```

```
MES2324(config-if)# storm-control broadcast level 15 trap
```

```
MES2324(config-if)# storm-control multicast kbps 20480 trap shutdown
```

```
MES2324(config-if)# storm-control unicast pps 12500 shutdown
```

MES14XX/24XX

```
MES2424(config)# errdisable recovery cause storm-control
```

```
MES2424(config)# storm-control mode kbps
```

```
MES2424(config)# interface gigabitethernet 0/1
```

```
MES2424(config-if)# storm-control broadcast level kbps 240
```

```
MES2424(config-if)# storm-control dlf level kbps 240
```

```
MES2424(config-if)# storm-control multicast level kbps 240
```

```
MES2424(config-if)# storm-control broadcast action shutdown
```

```
MES2424(config-if)# storm-control dlf action trap
```

```
MES2424(config-if)# storm-control multicast action trap-and-shutdown
```

Loopback Detection



MES23XX/33XX/5324

```
MES2324(config)# loopback-detection enable
MES2324(config)# loopback-detection mode {src-mac-addr | base-mac-addr | multicast-mac-addr | broadcast-mac-addr}
MES2324(config)# loopback-detection interval {1 — 60}
MES2324(config)# errdisable recovery cause loopback-detection
MES2324(config)#interface GigabitEthernet 1/0/1
MES2324(config-if)# loopback-detection enable
```

MES14XX/24XX

```
MES2424(config)# loopback-detection enable
MES2424(config)# loopback-detection destination-address {multicast MAC address}
MES2424(config)# loopback-detection interval {1 — 60}
MES2424(config)# errdisable recovery cause loopback-detection
MES2424(config)# interface GigabitEthernet 0/1
MES2424(config-if)# loopback-detection enable
```

Port security



MES23XX/33XX/5324

```
MES2324(config)# interface GigabitEthernet 1/0/1
```

```
MES2324(config-if)# port security mode secure permanent
```

```
MES2324(config-if)# port security max 3
```

```
MES2324(config-if)# port security discard trap 100
```

```
MES2324(config-if)# port security
```

MES14XX/24XX

```
MES2424(config)# interface GigabitEthernet 0/1
```

```
MES2424(config-if)# switchport port-security enable
```

```
MES2424(config-if)# switchport port-security mode secure-permanent
```

```
MES2424(config-if)# switchport port-security mac-limit 3
```

```
MES2424(config-if)# switchport port-security violation discard-shutdown
```

DHCP Snooping



MES23XX/33XX/5324

```
MES2324(config)# ip dhcp snooping
MES2324(config)# ip dhcp snooping vlan 10
MES2324(config)# interface gigabitethernet 1/0/1
MES2324(config-if)# ip dhcp snooping trust
```

MES14XX/24XX

```
MES2424(config)# ip dhcp snooping
MES2424(config)# ip dhcp snooping vlan 10
MES2424(config)# interface gigabitethernet 0/1
MES2424(config-if)# port-security-state trusted
MES2424(config-if)# set port uplink
```

IP Source Guard



MES23XX/33XX/5324

```
MES2324(config)# ip dhcp snooping
MES2324(config)# ip dhcp snooping vlan 1
MES2324(config)# ip source guard
MES2324(config)# interface gigabitEthernet 0/1
MES2324(config-if)# switchport mode access
MES2324(config-if)# switchport access vlan 10
MES2324(config-if)# ip source guard
```

MES14XX/24XX

```
MES2424(config)# ip dhcp snooping
MES2424(config)# ip dhcp snooping vlan 10
MES2424(config)# interface gigabitEthernet 0/1
MES2424(config-if)# switchport mode access
MES2424(config-if)# switchport access vlan 10
MES2424(config-if)# ip verify source port-security
```

Dynamic ARP inspection



MES23XX/33XX/5324

```
MES2324(config)# ip arp inspection
```

```
MES2324(config)# ip arp inspection vlan 10
```

```
MES2324(config)# interface gigabitethernet 1/0/1
```

```
MES2324(config-if)# ip arp inspection trust
```

MES14XX/24XX

```
MES2424(config)# ip arp inspection
```

```
MES2424(config)# ip arp inspection vlan 10
```

```
MES2424(config)# interface gigabitethernet 0/1
```

```
MES2424(config)# port-security-state trusted
```

```
MES2424(config)# set port uplink
```



We are always ready to discuss, develop and customize products for your needs!



630020, Russia, Novosibirsk, Okruzhnaya street, 29V
9:00 AM – 6:00 PM (GMT+7)
Monday – Friday



+7 (383) 274-10-01, 274-48-48
eltex@eltex-co.ru; eltex-co.com